



Thank you for purchasing this digital angle locator - please read these instructions prior to use.

Kit Contents

- Digital Angle Locator
- Soft-Sided Pouch
- Instruction Manual
- 1 x AAA Battery

Key Features

- Magnetic Base
- 4 x 90° Working Range
- Automatic LCD Inversion
- Bright Backlit LCD

Battery Installation

1. Depress the battery door latch and pivot the door to remove it.
2. Insert a new AAA battery according to the polarity indicated inside the battery compartment.
3. Replace the battery door. Your angle locator will immediately power on.

Using the Product

1. Press ON/OFF to power on the angle locator.
2. The angle locator will power up using the last stored zero point.
3. Place the locator on the first workpiece and press ZERO.
4. Place the angle locator against the second workpiece and read

LEVEL UP.

the angle between the two surfaces.

5. Press ON/OFF to reset the zero point to use true level as the reference.

6. Hold ON/OFF for two seconds to power off the angle locator.

7. If the locator is tilted out of its operating plane, "Error" will appear. Return the unit to a more upright position to continue measuring.

Care and Handling

- Power off after use (after 5 minutes of inactivity, the locator will power down).
- Avoid shock and vibration.
- Remove battery for extended storage (3 or more months).
- Avoid getting the unit wet.
- Remove moisture or dirt with a soft, dry cloth.
- Always store the locator in its pouch.

Specifications

Accuracy:	±0.1°
Resolution:	0.1°
Range:	4 x 90°
Temp Range:	32°F - 122°F
Dimensions:	2" x 2" x 1.3"
Weight:	0.265 lb
Battery:	1 x AAA

Product Warranty

Johnson offers a one-year limited warranty against manufacturer's defects. For full limitation details:

www.johnsonlevel.com/warranty

service@johnsonlevel.com

888-9-LEVELS

Canada: 800-346-6682

It is the user's responsibility to verify calibration before each use.

For a copy of this manual, scan the QR code or visit

www.johnsonlevel.com/manuals

